

AURO

Classic 8510



DE

EN

FR

IT

ES

NL

www.auro-mobile.com/8510

Overview



DE

EN

FR

IT

ES

NL

Enjoy pure telephony

Thank you for choosing this mobile phone.

Particularly easy operation, the highlights of this phone:

- a) Extra-loud listening and ringtone volume
- b) 100% Hearing Aid Compatibility because of bone conduction technology
- c) Big key, large characters, keypad backlight
- d) M1/M2/M3 fast dial key
- e) SOS button for 3 emergency calls and SOS message
- f) Auto Talk (if ringing phone is put down from charger)
- g) Low battery alarm
- h) Admin password for “Settings” and “Extra” menus
- i) Phonebook for 500 entries
- j) 20 callers ID each for missed, dialed and received call
- k) Integrated flashlight, FM radio
- l) Desktop charger
- m) Welcome screen of language setting for first using or different SIM card.

With these performance characteristics this mobile phone can provide you with increased safety and add to your feeling of wellbeing. To enable you to start using this phone as soon as possible, we have summarized the most important information in this manual.

We wish you every enjoyment and success with your new mobile phone.

Keys with important additional functions in the idle mode



Press in idle mode to open the main menu



Press in idle mode to open the clock alarm setting



Press in idle mode to open the phonebook shortcut menu



Press in idle mode to open the “call Logs”



Short press in idle mode to open the “User Profiles”



Press the left side key to turn on / turn off torch

Contents

1.	Important Safety Information	12
2.	Before Operation	14
2.1	Scope of Delivery	14
2.2	Information on Disposal	14
3.	Starting Up	15
3.1	Inserting the SIM Card	15
3.2	Inserting the Battery	15
3.3	Charging the Mobile Phone	15
3.4	Switch the Device On	16
3.5	Switch the Device Off	16
3.6	Display Symbols	17
4.	Making Phone Calls	17
4.1	Accepting a Call	18
4.2	Making a Call	18

4.3	Making a Call with Directing Dialing	18
4.4	Making a Call with the Phonebook	18
4.5	Calling Names (A-Z) from the Phonebook (Quick Search)	19
4.6	Redialing	20
4.7	Making an Emergency Call	20
4.8	Ending the Emergency Call Mode	21
4.9	Listening and Key Tone Volume	21
5.	Menu	21
5.1	Navigating in the Menu	21
6.	Messages	22
6.1	Messages (SMS)	22
6.1.1	Receiving SMS Message	22
6.1.2	Display SMS Message	22
6.1.3	Replay to SMS Message	23

7.	Settings	24
7.1	Phone Setting	24
7.1 .1	Display Setting	24
7.1.1.1	Schedule Power On/Off	24
7.1.1.2	Language	25
7.1.1.3	Preferred Input Methods	26
7.1.1.4	Display Characteristic	26
7.1.1.5	Auto Update of Date and Time	26
7.1.2	Network Setup	26
7.1.3	Security Setup	27
7.1.3.1	SIM Lock	27
7.1.3.2	Phone lock	28
7.1.3.3	Admin Password	28
7.1.3.4	Auto keypad Lock	29
7.1.3.5	Change Password	29

7.1.4	Restore Factory Setting	29
7.2	Set M1/M2/M3	30
7.2.1	Set M1 Call Number	31
7.2.2	Set M2 Call Number	31
7.2.3	Set M3 Call Number	31
7.3	Clock & Alarm	31
7.3.1	Set Time and Date	31
7.3.1.1	Set Home City	32
7.3.1.2	Set Time / Date	32
7.3.2	Set Alarm	32
7.3.3	Show Date and Time	33
7.4	SOS Setting	34
8.	Phonebook	35
8.1	Search	35
8.2	Search Contact	35

8.3	Add New	36
8.4	Copy All	36
8.5	Delete	37
8.6	Caller Groups	37
8.7	Settings	38
9.	Call History	38
10.	User Profiles	39
10.1	General Mode	39
10.1.1	Set Sound	39
10.1.2	Set Volume	40
10.1.3	Alert Type	40
10.1.4	Ring Type	41
10.2	Meeting Mode	42
10.3	Outdoor Mode	42
10.4	Indoor Mode	42

10.5	Headset Mode	42
10.6	Flight Mode	42
10.7	Switch off	42
10.8	Key Lock	42
11.	Extra	42
11.1	Unit Converter	43
11.2	Currency Converter	44
11.3	Health	44
11.4	Stopwatch	44
11.5	To do list	44
11.6	Calculator	44
11.7	Calendar	45
11.8	FM Radio	45
12.	Guarantee	46
Appendix		48

Important Safety Information



IMPORTANT: Non-observance of these manual can result in serious injury or damage to the device.

Read this instruction manual carefully, in particular the safety instructions, before you begin using the device, and keep the instruction manual for future use. If you pass the device on to a third party, be sure to pass on this manual too.



Warning: These warning notices must be observed in order to prevent any injury to the user or to third parties.

In different countries, different regulations may apply to the use of mobile phones (e.g. when driving, in hospitals, at petrol stations, in aircrafts). Note the laws for using a mobile phone in your country, and turn the device off when usage is not permitted, or when dangerous situations or interference could occur.

Only use the device in accordance with its purpose, and only at locations where telephoning poses no dangers.

Only use the manufacturer's power supply and battery. Inserting an unsuitable battery, or inserting the battery incorrectly, can result in the danger of explosion. The battery must not be opened or exposed to a flame.

The operation of medical devices can be affected. The manufacturers of pacemakers recommend a minimum distance of 20 cm between the devices when the mobile phone is switched on. Do not carry the phone in your breast pocket.

If you suspect that there has been interference between the phone and a medical device, please consult your doctor before using the phone again.

Make sure that small children do not play with the packaging material (danger of suffocation). The device and its accessories may contain small parts that can be ingested. Special care is needed if the device is to be used in the vicinity of small children or sick or disabled people. Keep the phone out of reach of such persons. Do not leave the device unattended when it is connected to the mains power supply.



Caution: Alerts you to possible damage to the device or other objects.

Your mobile phone is suitable for hearing aids. However, if some hearing aids produce a buzzing noise, contact your hearing aid specialist.

Do not expose the device to moisture, or to extreme heat (strong, direct sunlight) or cold (permafrost). Do not drop the device, and avoid jolting, shocks and pressure.

The phone must only be opened to replace the battery or the SIM card. Any other changes made to the device are not permitted and result in the loss

of the operating license and the guarantee.

The phone can cause interference in the vicinity of televisions, radios and other electronic devices.

2.0 Before Operation

2.1 Scope of Delivery

1 Mobile phone

1 Battery

1 Power supply unit. Input: AC 100-240 V, 50/60 Hz, 200 mA Output: DC 5 V, 800 mA

1 Charging station

1 USB Earsphone

1 USB cable

1 Operating manual

2.2 Information on Disposal



 
Packaging is reusable, or can be recycled. Please correctly dispose of packaging material no longer required. Should you detect any transportation damage when unpacking the device, please contact your dealer immediately.

This device may not be disposed of along with household refuse! Every consumer is obliged to deposit all electrical or electronic devices, no matter whether they contain harmful substances or not, at a collection point in his/her town or with a commercial dealer, so that it can be disposed of in an


environmentally-friendly way.

Remove the battery before disposing of the device. Do not throw used batteries into the household refuse; put them in with special waste or in a collection station in a specialist shop. If you have any questions about disposal, contact your local authority or your dealer.


3.1 Inserting the SIM Card

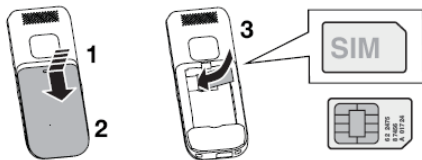

 3.2 Inserting the Battery

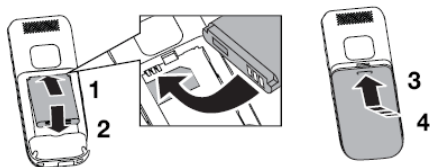

 3.3 Charging the Mobile Phone

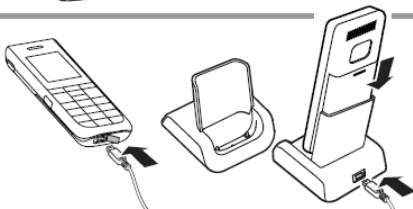

3.4 Switch the Device On



Press and hold down until the device switches on



Enter the PIN of the SIM card



Confirm PIN OK = device is ready for use



NOTE: When insert SIM card in the phone and switch on, following the welcome screen, there will come out a menu for language setting, English, Spanish, French, German, Italian, Dutch and Portuguese for selection.

3.5 Switch the Device Off



Press and hold down until the device switches off

3.6 Display Symbols



Battery Display



Signal Strength



Alarm Switched On



Headset Plugged In



Key Lock On



Foreign Network



Call Transfer Active



Call Missed



SMS Received



Muting



Silent



Ringtone Switched On



Vibration Only



Vibration Then Ring



Vibration and Ring

Making Phone Calls

4.1 Accepting a Call



Press to accept a call



Press to end a call or to reject an incoming call

4.2 Making a Call



Enter the desired phone number with the area code



Press to delete the last number



Press and hold down to delete all numbers
Press to dial the number displayed



Press to end the call or to interrupt the dialing

4.3 Making a Call with Directing Dialing



Press and hold down direct dialing key M1, M2 or M3
until the corresponding number stored is called



Press to end the call



NOTE: Setting phone numbers for direct dialing keys –
see section 7.2

4.4 Making a Call with the Phonebook



Press to open „Main menu“



Press to find „Phonebook“



Press to open „Phonebook“



Press to open „Search“



Press until the desired phone number appears



Press to dial the phone number displayed



Press to end the call or to close the phonebook

4.5 Calling Names (A-Z) from the Phonebook (Quick Search)



Press to open “Search”



Enter the first letters for the person you want to call.



E.g. Press key **6** once for **M**
Key **3** twice for **E**



Key **9** three times for **Y**
Until the name MEYER is displayed with its phone number



Press to dial the phone number displayed



Press to end the call or to close the phonebook

4.6 Redialing



Press to open the call logs



Press until the desired phone number is selected



Press to dial the phone number displayed



Press to end the call or to close the call list

4.7 Making an Emergency Call



Press the SOS call key on the back of the device and push it firmly upwards to trigger the emergency call.

The emergency call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pushing the emergency call key back down again. Your mobile phone dials in sequence the three emergency call numbers saved until the call is accepted.

Before the call, the phone will send a SOS message to each SOS numbers. After the call, the phone will alarm a ringtone to mention the user push down the SOS call key.



NOTE: Save up to three emergency phone numbers that will be dialed in sequence in the case of an emergency, see section 7.4.

4.8 Ending the Emergency Call Mode



Press the SOS call key and push it downwards

4.9 Listening and Key Tone Volume



Press during a phone call to increase or decrease the listening volume. Press in idle mode to adjust the Key Tone Volume.



Never hold the mobile phone to your ear when it is ringing or when an emergency call has been triggered. This could damage your hearing.

5. Menu

5.1 Navigating in the Menu

The device is equipped with numerous functions that can be set in the menu.



Press in idle mode to go to the main menu.
The following menu items are displayed:



Messages
Settings
Phonebook
Call History
User Profiles
Extra

 M1

Press in the main menu to select the desired menu item
Press again to open the selected menu item, e.g.:
Messages -> SMS ->Inbox -> Outbox -> Write a message->
Templates -> SMS Setting



NOTE: Pressing the M3 key takes you back to the previous menu.

6. Messages

6.1 Messages (SMS)

SMS messages are short written messages. They can be entered, sent and received with mobile phones and some landline phones.

6.1.1 Receiving SMS Message

A signal tone and the message “1 New Message!” in the display indicate that a new SMS message has been received.

6.1.2 Display SMS Message

 M1

Press to display the message



Press to scroll down and display the rest of the text.

6.1.3 Replay to SMS Message



Press to open „Option“



Press to select „Reply“



Press to open the window for replying to the SMS message



Use the number keys to enter the desired text
(e.g. HELLO = **4** twice for **H**,
 3 twice for **E**,
 5 three times for **L**, brief pause,
 5 three times for **L** and
 6 three times for **O**)



Press to delete an incorrect entry



Press to send the reply



Press to return to idle mode



NOTE: Pressing the key **#*#** switches from upper case to lower case, and vice versa. Press and hold **#*#** switches to the numeric mode (123).

Pressing the key **0 _** enters a space.

Pressing the key ***+*** selects special characters.

7. Phone Settings

7.1 Phone Setup

In the Phone Setting menu, you can adapt, for example, the display, language, screen saver, etc. to your personal requirements.


7.1.1 Display Setting

7.1.1.1 Schedule Power On/Off



Press to open “Main menu”



Press to go to “Settings” and press  to open it



Press 4 times to open „Phone Settings“, „Display Setting“, „Schedule Power On/Off“, „Sched. Power...“ menu



Press to open “Edit power...” menu for power on/off setting



Press to select status “Enable/Disable”



Press to go to “Power on/off”



Press to select “Power on/off”



Key in the numeric for the power on/off time setting



Press for “Done”

7.1.1.2 Language

In the “Display Setting” menu



Press to go to “Language” menu



Press to open the language menu



Press to select the language



Press for “Done”

7.1.3 Preferred Input Methods



In the „Display Setting“ menu
Press to go to “Preferred Input Methods” menu



Press to open the Preferred Input Methods setting



Press to select the Input Method



Press for “Done”

7.1.4 Display Characteristic



In the „Display Setting“ menu
Press to go to “Display Characteristic” menu



Press to open the Display Characteristic setting



Press to select the Wallpaper, Screen saver, Power On Animation, Power Off Animation submenu for setting.



Press for “Done”

7.1.5 Auto Update of Date and Time



In the „Display Setting“ menu
Press to go to “Auto Update of Date and Time” menu



Press for On/Off setting

7.1.2 Network Setup



In the Phone Setting menu,
Press to go to the “Network Setup” menu



Press to open “Network Se...” menu



Press to select “Network selection”, “Preferred networks”, “GPRS connection”



Press to open the selected submenu for setting

7.1.3 Security Setup



In the Phone Setting menu,
Press to go to the “Security Setup” menu



Press to open “Security Se...” menu



Press to select “SIM lock”, “Phone lock”, “Admin Password”, “Auto keypad lock”, “Change Password” submenu



Press to open the selected submenu for setting

7.1.3.1 SIM Lock



Press to open the SIM lock menu



Input the PIN code (Factory Setting: 1122)



Input the new PIN code



Press for “Done”

7.3.2 Phone Lock



Press to go to the “Phone lock” menu



Press to open the “Phone lock” menu



Input the default Password (Factory Setting: 1122)



Input the new Password



Press for “Done”

7.1.3.3 Admin Password



Press to go to the “Admin Password” menu



Press to open the “Admin Password” menu

Input Password



Input the default Password



Press for “Phone Locked” or “Phone Unlocked”. Admin password will come into effect on “Settings” and “Extra” menus.

7.1.3.4 Auto Keypad Lock



Press to go to the “Keypad lock” menu



Press to open the “Keypad lock” menu



Press to select Auto Keypad Time: None, 5s, 30s, 1Min or 5Min



Press for “Done”

7.1.3.5 Change Password



Press to go to the “Change Password” menu



Press to open the “Change Password” menu



Press to select “PIN”, “PIN2”, “Phone Lock Password” submenu.



Press to open and setting the selected menu

7.1.4. Restore Factory Setting



In the Phone settings menu
Press to go to the “Restore Factory Setting” menu



Press to open the “Restore Factory Setting” menu

Input Password



Input the default Password (Factory Setting: 1122)



Press for “Done”

7.2 Set M1/M2/M3

7.2.1 Set M1 Call Number



In the “Settings” menu, follow below steps:
Press to go to the “Set M1/M2/M3” menu



Press to open “Set M1/M2/M3” menu



Press to open “Options” submenu



Press to open “Edit” submenu



Input the M1 fast dialing number



Press to store the M1 fast dialing number

7.2.2 Set M2 Call Number

Procedures to set “M2 Call Number” as in section 7.2.1, Set M1 Call Number

7.2.3 Set M3 Call Number

Procedures to set “M3 Call Number” as in section 7.2.1, Set M1 Call Number

7.3 Clock & Alarm

7.3.1 Set Time and Date

In the Time & Date menu, follow below steps:

7.3.1.1 Set Home City



Press to go to the “Clock & Alarm” menu



Press to open “Clock & Alarm” menu



Press to open “Time and Date” submenu



Press to open “Set home city” submenu



Press to select the city you want to set



Press for “Done”

7.3.1.2 Set Time / Date



Press to go to the “Clock & Alarm” menu



Press to open “Clock & Alarm” menu



Press to open “Time and Date” submenu



Press to go to the “Set time / date” submenu



Press to open “Set time / date” submenu



Key in the time (HH:MM format)



Press to go to the date setting



Key in the Date (YYYY/MM/DD format)



Press for “Done”

7.3.2 Set Alarm

In the Settings menu, follow below steps:



Press to go to the “Clock & Alarm” menu



Press to open “Clock & Alarm” menu



Press to go to the “Alarm” submenu



Press to open “Alarm” submenu



Press to open the No.1 alarm setting



Press to set alarm On/Off



Press for “Done”



Press to go to the alarm time setting line, set the alarm time



Press to go to the alarm repeat setting



Press to select repeat once, Days, Everyday

M1

Press for “Done”

7.3.3 Show Date and Time



Press to go to the “Clock & Alarm” menu

M1

Press to open “Clock & Alarm” menu



Press to go to the “Show Date and Time” submenu

M1

Press to select switch On/Off

7.4 SOS Setting

M1

Press to open the “Main menu” in idle mode



Press to go to the “Settings” menu

M1

Press to open the “Settings” menu




Press to go to the “SOS Setting” menu

M1

Press to open “SOS Setting” menu



Press to choose “SOS” or “Setting message”

 Press to open the selected item to set 3 SOS numbers or message


 Press to save


8. Phonebook

All operations below are in the phonebook menu.


8.1 Search

 Press to open the “Quick search” submenu

 Use the number keys to enter the desired text
(e.g. HELLO = **4** twice for **H**,
3 twice for **E**,
5 three times for **L**, brief pause,
5 three times for **L** and
6 three times for **O**)

 Press to select the contact person name

 Press to open the contact person options

 Press to select Dial, Send SMS, View, Edit, Delete, Copy, Move, Duplicate etc.

 Press for “Done”

8.2 Search Contact



Press to go to the “Search Contact” menu



Press to open “Search Contact” menu



Use the number keys to enter the desired text



Double press to search the contact person name



Press to open the contact person options



Press to select Dial, Send SMS, View, Edit, Delete, Copy, Move, Duplicate etc.



Press for “Done”

8.3 Add New



Press to go to the “Add new” menu



Press to open “Add new” menu



Press to choose “To SIM” or “To phone”



Press to open “To SIM” or “To phone”, edit the new contact



Press for “Done”

8.4 Copy All



Press to go to the “Copy all” menu



Press to open “Copy all” menu



Press to choose “From SIM” or “From phone”



Double press to copy from SIM to phone or from phone

8.5 Delete



Press to go to the “Delete” menu



Press to open “Delete” menu



Press to choose “From SIM”, “From phone” or “One by one”



Double press to delete

8.6 Caller Groups



Press to go to the “Caller Groups” menu



Press to open “Caller Groups” menu



Press to choose “Friends”, “Family”, “VIP”, “Business” or “Others”



Press to open the selected item, to edit and set the ringtone, picture, member list



Press for “Done”

8.7 Settings



Press to go to the “Settings” menu



Press to open “Settings” menu



Press to choose “Memory status”, “Preferred storage”, “Fields”,



“Name list filter”, “My vCard”, “vCard version”, “Synchronize Phonebook”



Press to open the selected item, to check, edit or set the ringtone, picture, memberlist.



Press for “Done”

9. Call History



Press to open the “Main menu” in idle mode



Press to go to the “Call History” menu



Press to open “Call History” menu



Press to select “Missed Calls”, “Dialed Calls”, “Received Calls”,



“Delete Call Log” or “Call Time” submenus etc.



Press to open the selected item to check, edit or set it.

10. User Profiles

10.1 Set General Mode



Press to open the “Main menu” in idle mode



Press to go to the “User Profiles” menu



Press to open “User Profiles” menu



Press to open “General” menu



Press to activate General Mode **or**



Press to choose “Customize” menu

 M1

Press to open “Customize” menu

10.1.1 Set Sound

 M1

Press to open “Set Sound” menu

 M1

Press to open “Ring Tone” menu to set ringtone **or**

 ♥

Press to choose “Alarm Tone”, “Power On”, “Power Off”, “Message Tone”

 M1

Press to open the selected item

 ♥

Press to select the ringtone

 M1

Press for “Done”

10.1.2 Set Volume

In the customize menu

 ♥

Press to go to the “Set Volume” menu

 M1

Press to open “Set Volume” menu

 M1

Press to open “Speech Tone” **or**

 ♥

Press to go to the “Ring Tone Vol.” menu for setting

 M1

Press to open the menu



Press to set the volume for speech tone or ring tone



Press for “Done”

10.1.3 Alert Type

In the customize menu



Press to go to the “Alert Type” menu



Press to open “Alert Type” menu



Press to select “Ring Only” **or**



Press to select “Vibrate Only”, “Vibrate and Ring”, “Vibrate then Ring”



Press for “Done”

10.1.4 Ring Type

In the customize menu



Press to go to the “Ring Type” menu



Press to open “Ring Type” menu



Press to select “Single” **or**

M1

Press to select “Repeat”, “Ascending”

M1

Press for “Done”

10.1.4 Extra Tone

In the customize menu



Press to go to the “Extra Tone” menu

M1

Press to open “Extra Tone” menu



Press to select “Warning” or



Press to select “Error”, “Comp on”, “Connect”

M1

Press for switch on/off

M3

Press for “Save”

M1

Press for “Done”

10.2 Meeting Mode

Procedures to set “Meeting Mode” as in section 10.1, Set General Mode

10.3 Outdoor Mode

Procedures to set “Outdoor Mode” as in section 10.1, Set General Mode

10.4 Indoor Mode

Procedures to set “Indoor Mode” as in section 10.1, Set General Mode

10.5 Headset Mode

Procedures to set “Headset Mode” as in section 10.1, Set General Mode

10.6 Flight Mode

Procedures to set “Flight Mode” as in section 10.1, Set General Mode

10.7 Switch off

In switch off menu, press “Option” to open it, press “OK” will switch off the phone directly

10.8 Key Lock

Key Lock menu, press “Option” to open it, press “OK” will lock the keypad directly

11. Extra



Press to open the “Main menu” in idle mode



Press to go to the “Extra” menu

M1

Press to open “Extra” menu

11.1. Unit Converter

For weight converter

M1

Press to open the “Unit Converter” menu

M1

Press to open the “Weight” menu

*+

#N/A

Press to select Kg > Pound or Kg > Ounce

♥

Press to input the weight with Kg

M1

Press for “Done”

For length converter

M1

Press to open the “Unit Converter” menu

♥

Press to go to the “Length” submenu

M1

Press to open the “Length” submenu

*+

#N/A

Press to select Km > Mile, CM > Inch, M > Foot or Yard

♥

Press to input the length

M1

Press for “Done”

11.2 Currency Converter

Similar procedure to 11.1, please refer to it

11.3 Health

Similar procedure to 11.1, please refer to it

11.4 Stopwatch

Similar procedure to 11.1, please refer to it

11.5 To do list

Similar procedure to 11.1, please refer to it

11.6 Calculator



Press to open the “Main menu” in idle mode



Press to go to the “Calculator” menu



Press to open “Calculator” menu



Use the number keys to enter the number



Press to select the “+”, “-”, “×”, “/”



Press for “Done”

11.7 Calendar



Press to open the “Main menu” in idle mode



Press to go to the “Calendar” menu



Press to open “Calendar” menu



Press for options: “View tasks”, “Add task”, “Jump to date”, “Go to weekly view”



Press to choose “View tasks”, “Add task”, “Jump to date”, “Go to weekly view”



Press to open and set selected item



Press for “Done”

11.8. FM Radio



Press to open the “Main menu” in idle mode



Press to go to the “FM Radio” menu



Press to open “FM Radio” menu



Press to play the radio



Press to pause



Press to adjust the frequency



NOTE: Earphone is antenna for FM radio too, please connect it to the phone bottom where USB connector is for operation.

12. Guarantee

If the device is used correctly, International Brand Distribution GmbH, Fahrgasse 5, 65549 Limburg, guarantees it for a period of 24 months from the date of purchase. This guarantee declaration will cover all legal requirements. During the guarantee period, all defects will be resolved by repairing or replacing the device free of charge if the defect is due to a material or manufacturing error.

Damage caused by incorrect use, by the intervention of third parties, or by acts of God, is excluded from the guarantee, as are accessory parts that are subject to normal wear and tear (batteries, etc.). Additional claims such as compensation are also excluded, even if the damage to the device is recognised as a guarantee case. The device is subjected to strict quality controls. However, if you do have a problem with this product, please always first contact our

Technical service hotline

+49 (0) 180-5118870-2

(14 cents/minute from the German Telekom landline network, charges from mobile networks can differ)

In guarantee cases, send the device to our Service Team along with a description of the error and proof of purchase. If devices are sent in for repair without proof of purchase, repairs can only be carried out against pay-

ment. This also applies to devices that are not packaged sufficiently.
We reserve the right to make formal changes towards improving and developing the product further. © International Brand Distribution GmbH 07/2009

The Auro Classical 8510 mobile phone complies with EU directive R&TTE. It also complies with the European Electromagnetic Compatibility (EMC) and Product Safety Directive. Thus, the Auro Classical 8510 carries the CE marking. You can view the conformity declaration and certificates for permission to operate and registration at www.branddistribution.de.

DE

EN

FR

IT

ES

NL